


Burn Frieworks Operation Guide

Due to the unstable computer power and the Webcam possibly lose the built-in code and it causes PC black screen or unable to open any images and you'd better re-burn code to its normal level and the details are described as below:


Unzip the Fireworks and code (it covers G code2 for Webcam G series and E code 1 for Webcam E series , F code 1 for Webcam F series , for example, burn PKS-732G ,please select G code2)

2.Connect the Webcam plug to USB port.



3. Click the file “ Fireworks.exe” in the folder and confirm if the Webcam hardware is connected properly to your PC. If it is ok, the device menu in the Fireworks will display and if not, the USB video device is “No”.

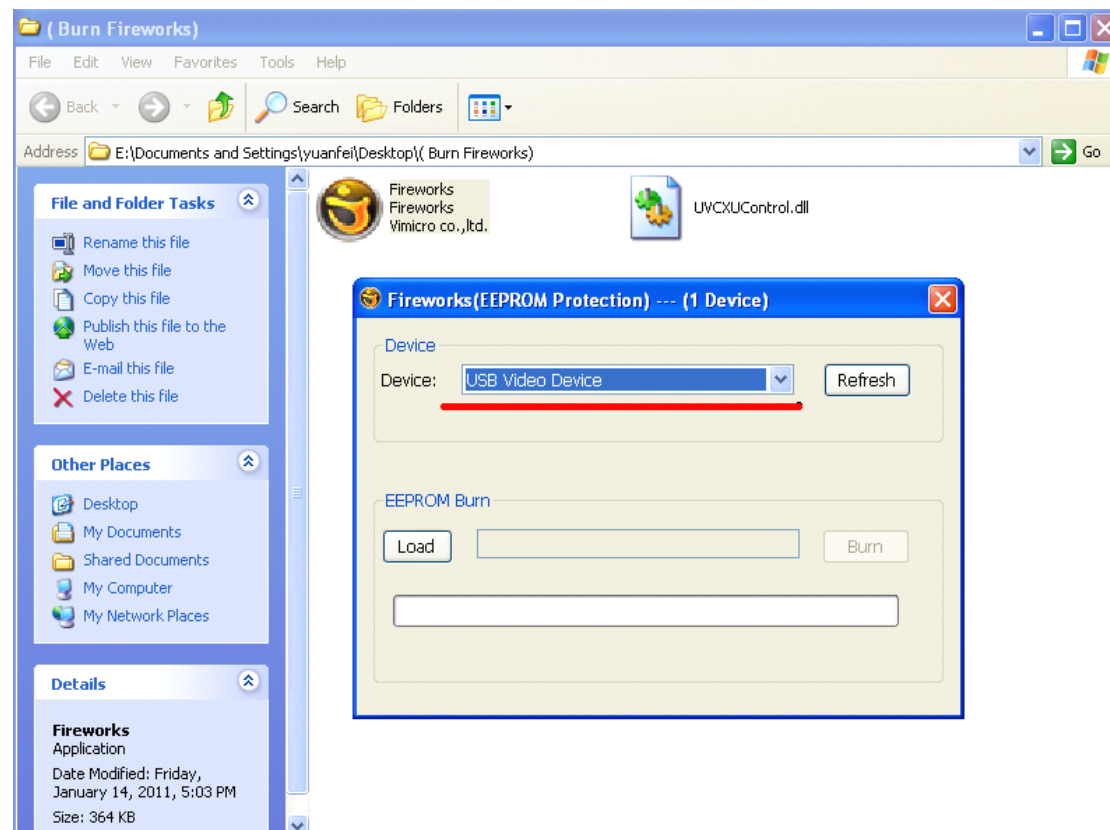


4. Click the button “Load” in the dialogue popping up and select the file to be burned (Be sure to select the corresponding code)

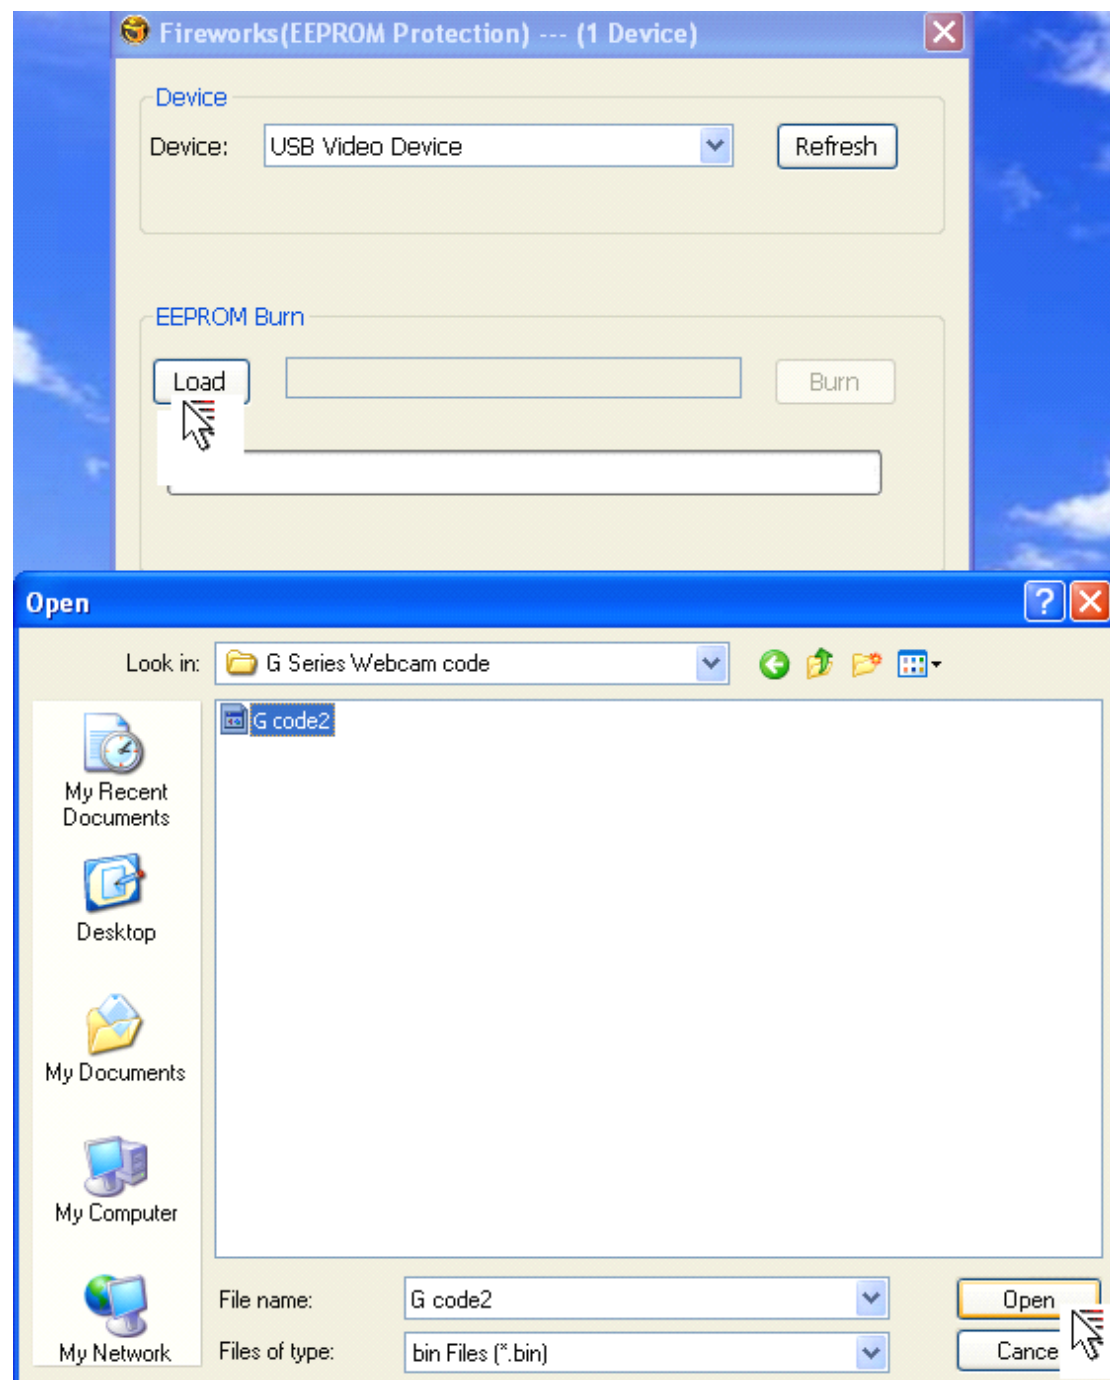

5. Click the button “ Burn” to proceed the process.

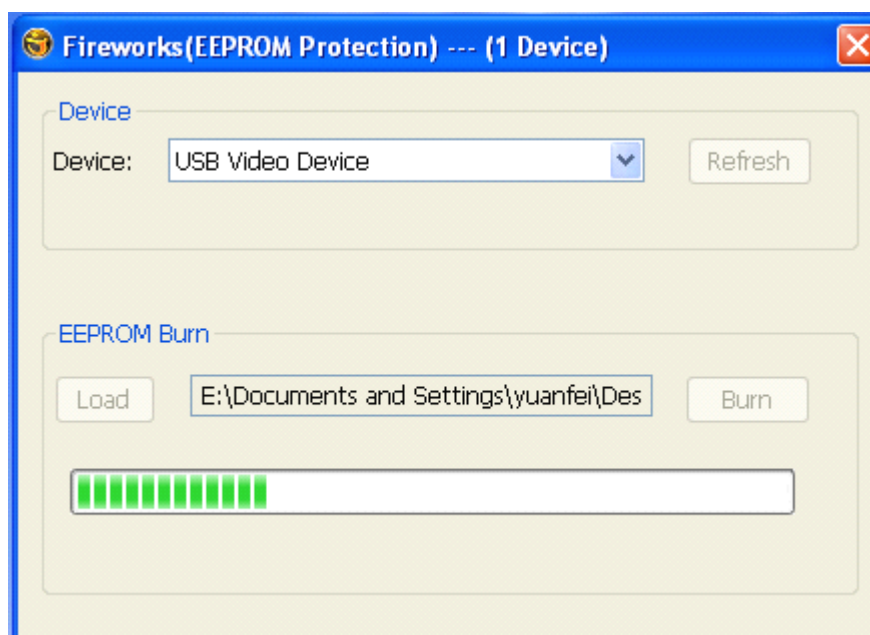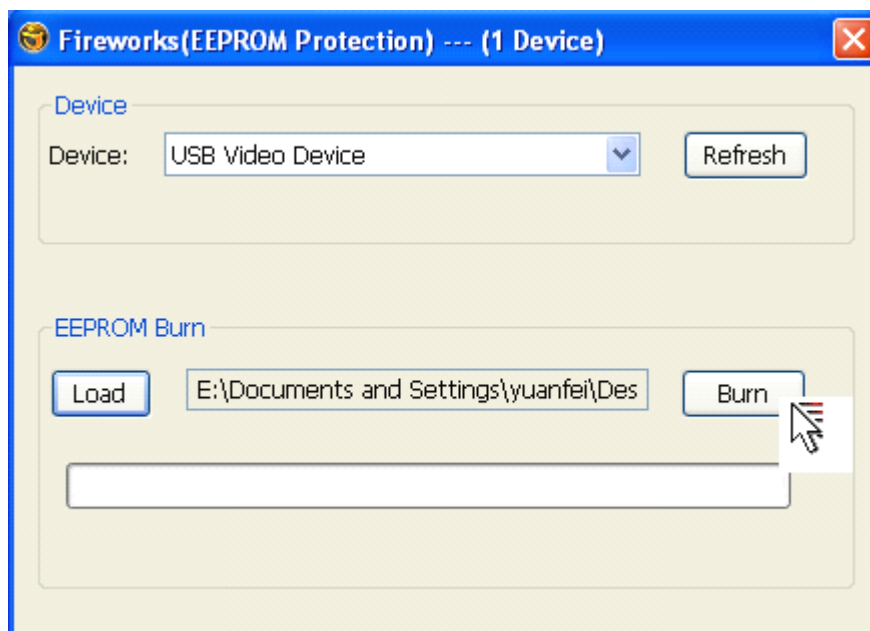

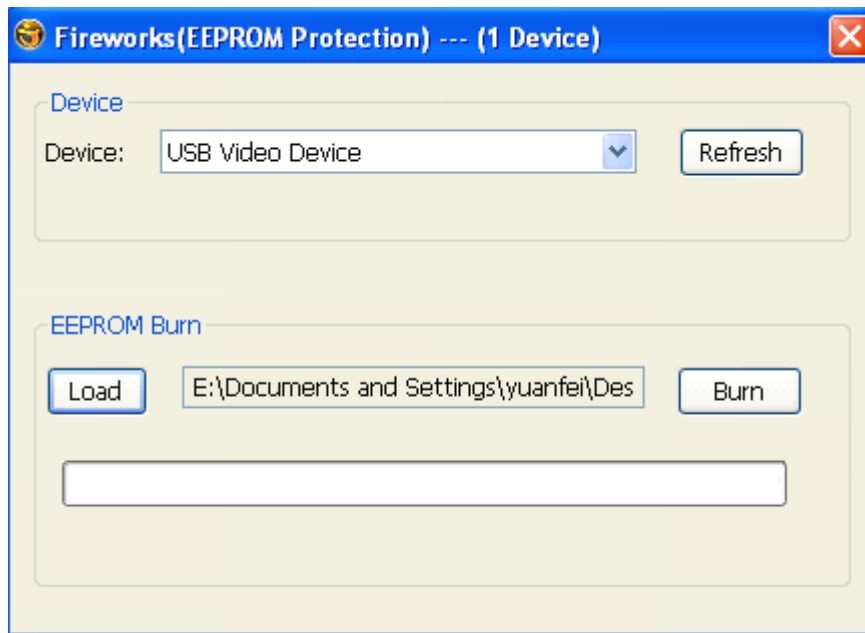

6. Please re-disconnect and re-plug the Webcam plug after it is complete.

7. The Webcam can be used normally after burning code.