

135*100mm

EST. 1987
A4TECH

BH220

QUICK
START
GUIDE



Bluetooth v5.3

FSTYLER
COLLECTION

WHAT'S IN THE BOX



Bluetooth Headset




USB Type-C Rechargeable Cable



User Manual

KNOW YOUR PRODUCT

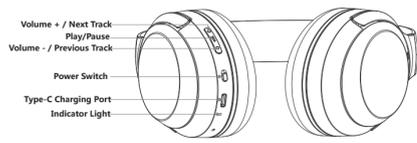

3-Ways Foldable



CONTROL ON YOUR FINGERS

Short Press: Volume +
Long Press: Next Track

Music Playback: Play/Pause (Short Press)
Incoming Call: Answer/Hang-up (Short Press)

Short Press: Volume -
Long Press: Previous Track

Power Switch
ON: Enter pairing mode, the indicator light flashes in red and blue alternately.
OFF: Power Off


WIDE COMPATIBILITY



Bluetooth v5.3

CONNECTING BLUETOOTH DEVICE


(For The First Time Use)

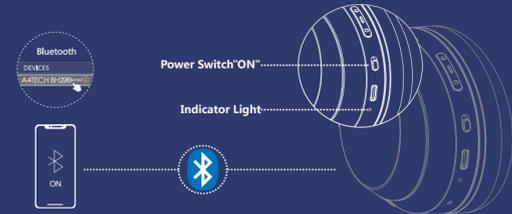

- ① Power Switch "ON", the indicator light flashes in Red and Blue alternately when pairing.
- ② Choose "A4TECH BH220" from your Bluetooth device.
- ③ The indicator flashes in Blue slowly after the headset is connected.

CONNECTING BLUETOOTH DEVICE

(For The Second Time Use)

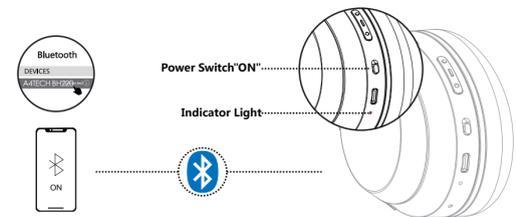


The device you connected last time will be remembered. Automatically connect back to the last device after power on.

Warm Tips:

Make sure the Bluetooth devices is turned on.

CHARGING/LOW BATTERY INDICATOR

15 minutes Charging Time = 3 hours Playback Time

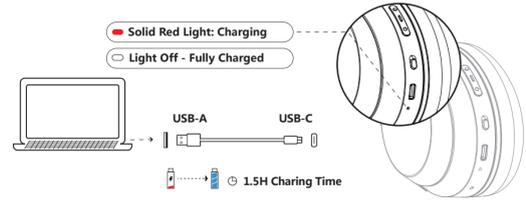

Flashing red light indicates when the battery is below 25%.

TECH SPEC

Speaker Unit:	40mm Hybrid Diaphragm
Frequency:	20Hz - 20KHz
Impedance:	32 ohm
Sensitivity:	100 dB
Mic. Type:	ENC Omni-Directional
Mic. Frequency:	100Hz - 10KHz
Mic. Sensitivity:	-42 dB
Wireless Mode:	Bluetooth v5.3
Operation Distance:	Up to 10 m (32 feet)
Battery Type:	400mAh Lithium Battery
Charging Time:	1.5H
Playback Time:	40 Hours (50% volume)
USB Type-C Charging Cable:	50 cm
Weight:	198g

SAFETY RULES

1. To avoid hearing damage, do not use headphones at a high volume for a long time.
2. Never disassemble or modify your headphones for any reason. Otherwise, it may cause the headphones to malfunction, which is not covered by the warranty.
3. Do not get the device wet with liquids, otherwise will cause serious damage to the device. Damage caused by water entering the device will not be covered by the manufacturer's warranty.
4. Please do not place the product in an environment where the temperature is too high or too low (above 45°C or below -20°C).
5. Not suitable for children under 3 years old.
6. Do not use the device during a thunderstorm.

WARNING STATEMENT

THE FOLLOWING ACTIONS MAY DAMAGE THE PRODUCT.

1. To disassemble, bump, crush, or throw into the fire is forbidden for lithium batteries.
2. Do not expose under the strong sunlight.
3. The discard of the battery should obey the local law, if possible please recycle it. Do not dispose of it as household garbage, because it may cause an explosion.
4. Do not continue to use if severe swelling occurs.
5. Please try to avoid charging in an environment below 0°C.
6. The user is not allowed to remove or replace the batteries unless specified statement in the user manual.

Bluetooth

The Bluetooth word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by A4TECH is under license. Other trademarks and trade names are those of their respective owners.

EST. 1987
A4TECH

FSTYLER
COLLECTION



www.a4tech.com



Scan for E-Manual