

Right Button: Play / Pause Capture Button: Open Browser\* Scroll Wheel: Volume Up / Down

**DPI Button:** Open Media Player\*

1 One click the capture button.

to capture the screen area.

Freeform Snip

2 Select the screenshot type by pressing the left key.

3 Long press the left key and move the mouse cursor


Windows Snip

4 Release the left key and the screenshot will be recorded. 5 You can paste the screenshot to another application.


Fullscreen Snip


Scroll Button: Mute

Forward: Previous Track

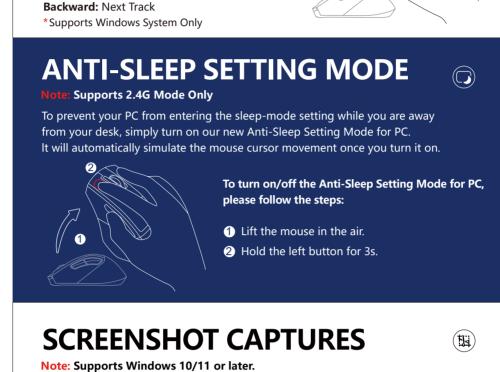

Capture **Button** 

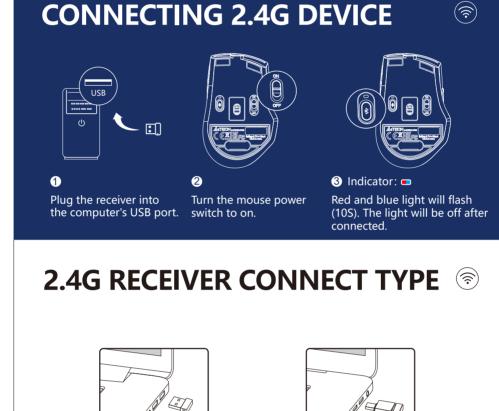

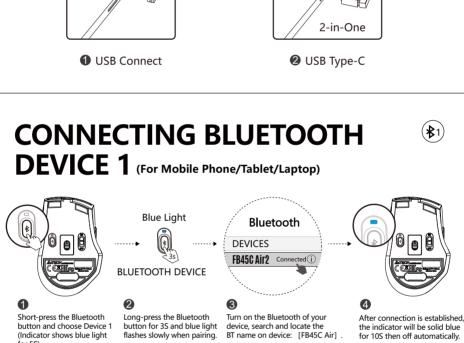

**CONNECTING BLUETOOTH** 


**Bluetooth** 

DEVICES

**DEVICE 2** (For Mobile Phone/Tablet/Laptop)

**Red Light** 

**(\$**2)

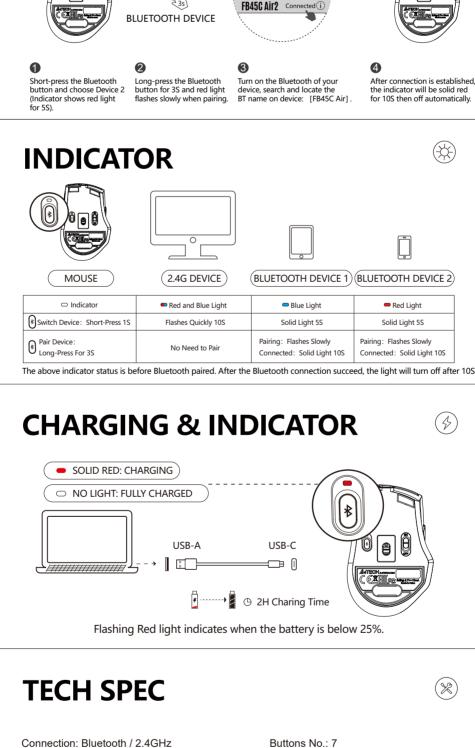





6. Forbidden to use 6V to 24V charger, otherwise the product will be burned.

3. Please obey all local laws when discarding the batteries, if possible please recycle it. Do not dispose it as household garbage, it may cause a fire or an explosion.



2. Do not expose under the strong sunlight.

5. Do not remove or replace the battery.

4. Please try to avoid charging in the environment below 0℃.

Recommended to use a 5V charger for charging.



Scan for E-Manual