





## SCISSOR SWITCH KEYBOARD QUICK START GUIDE

www.a4tech.com**Q** 

**FX70** 

(Package Including)


STYLER\_

Low Profile Scissor Switch Keyboard

User Manual





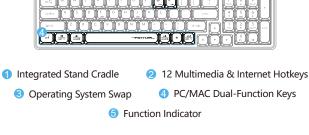

Low Profile Scissor Switch Keyboard

Multi-key rollover ensures smooth typing and precise multi-key input,

www.a4tech.com

eliminating key conflicts for efficient workflows and competitive gameplay.

TSTYLER\_


System

Мас

Windows

(Revolutionary Anti-Ghosting)

**Note: Supports Windows OS Only** 

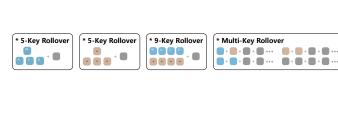

www.a4tech.com

Low Profile Scissor Switch Keyboard

Function / Layout Indicator

Light will be off after flashing.

F11 Volume Down

Mac

Not Support

fp + O

Shortcut [Long-Press for 3S]

FN Multimedia Key Combination Switch

Backward

Search

Other FN Shortcuts Switch)

Shortcuts

Keyboard Layout

alt

cmd 🕊

Plug the USB cable to the computer USB port.

For the best product performance, please download and install the Software from www.a4tech.com/download.aspx

Note: The software does not support Mac systems.

Connection

Software Download

Note: The layout you used last time will be remembered. You can switch the layout by following the above step.

Windows/Mac OS Keyboard Layout)

 $\begin{array}{c} \text{fn} + \begin{pmatrix} F_1 \\ \bigcirc \end{pmatrix} \text{ Home Page} & \begin{pmatrix} F_5 \\ \oplus \end{pmatrix} \text{ Input Switching} & \begin{pmatrix} F_9 \\ \longleftarrow \end{pmatrix} \text{ Next Track} \\ \\ \hline \begin{pmatrix} F_2 \\ \bigcirc \end{pmatrix} \text{ System Switching} & \begin{pmatrix} F_6 \\ \bigcirc \end{pmatrix} \text{ Screen Capture} & \begin{pmatrix} F_{10} \\ \longleftarrow \end{pmatrix} \text{ Mute} \\ \end{array}$ 

Previous Track

Play / Pause

Low Profile Scissor Switch Keyboard

Windows

Screen Lock

Windows

Ctrl

Alt

Start 👭

Device Screen Brightness +

Device Screen Brightness -

Switching Steps:

① Choose MAC layout by pressing Fn+O
② Choose Windows layout by pressing Fn+P.

Control ^

Option 🛰

Command 55

www.a4tech.com

Dual-Function Key

Note: The final function refer to the actual system.

alt cmd ₩	Alt (Right)	Command 36
ctrl opt ~	Ctrl (Right)	Option 🗨
www.a4tech.com		
TSTYLER COLLECTION	Low Profile Scissor Switch Keyboard	
(Installation)		

( Product Specifications )

**M**4TECH

Switch: Scissor Switch

Character: Laser Engraving

Cable Length: 150 cm

Total Travel Distance: 2.0 mm

Reyboard Layout: Win / Mac

Hotkeys: FN + F1 ~ F12

System Platform: Windows / Mac

Q & A

Question

How to switch layout under different system?

Answer

You can switch layout by pressing Fn + O / P under Windows | Mac.

www.a4tech.com

Low Profile Scissor Switch Keyboard

Question Does the layout can be remembered?

Answer The layout you used last time will be remembered.

Answer Because Mac system does not have this function.

Question Why can't the function lights in Mac system prompt?

www.a4tech.com



COLLECTION



